


• (▲) Also available for purchase separately.
 • (*) Not sold in some regions.

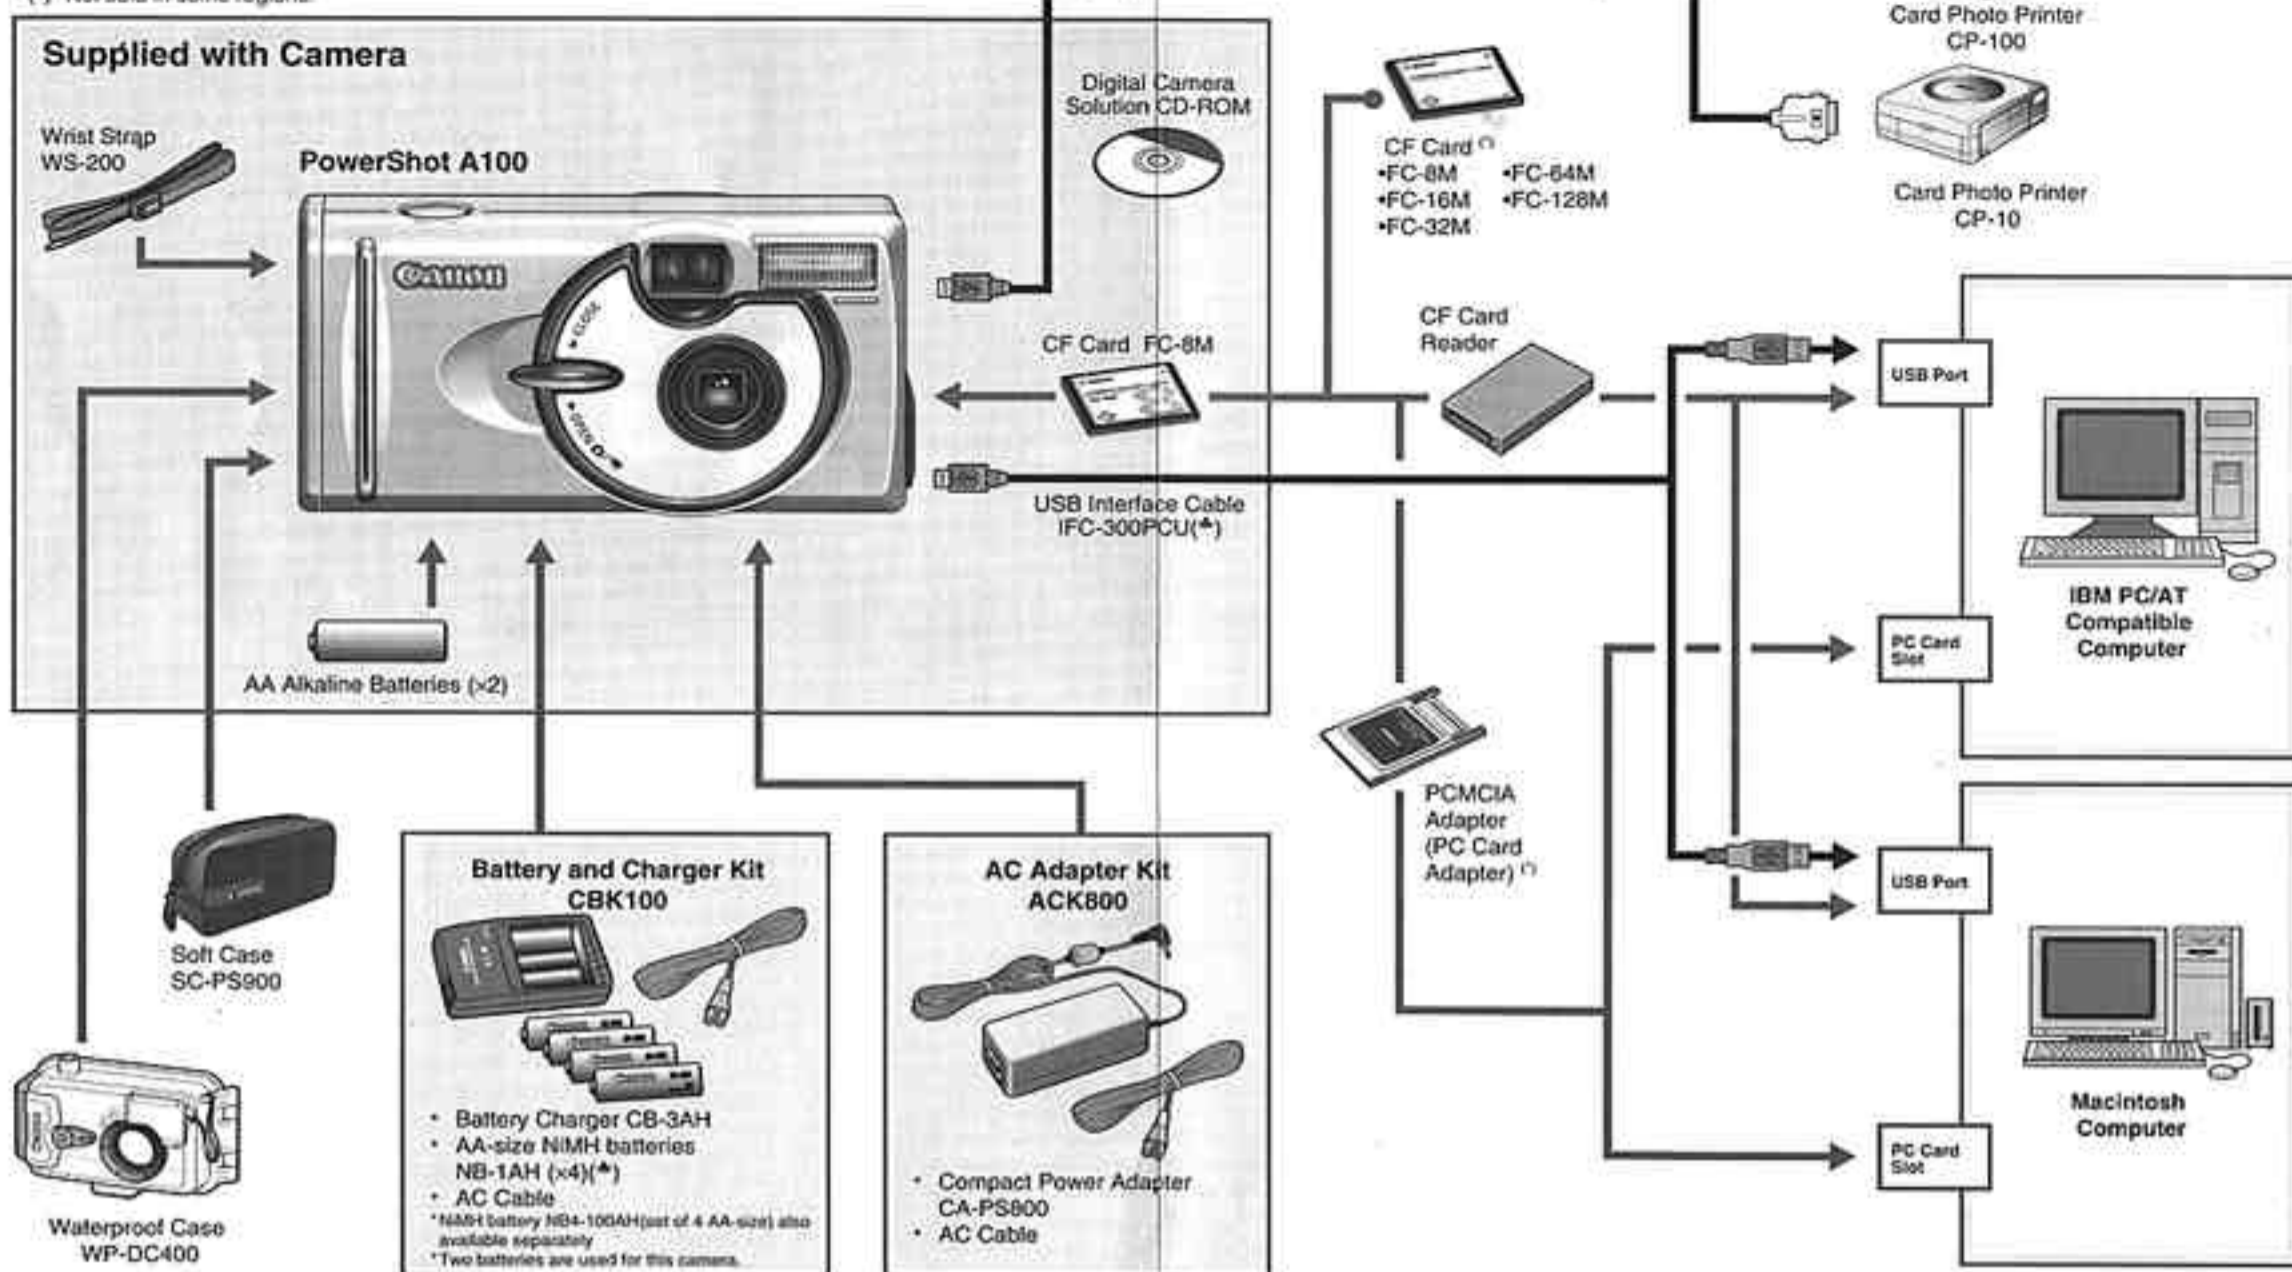

CDI-E038-010

© 2002 CANON INC. PRINTED IN MALAYSIA

Confirming the Package Contents

Your PowerShot camera package includes all of the following items. If any of these items is missing, please contact the dealer for assistance.

- Digital Camera
- Wrist Strap
- AA Alkaline Battery (x2)
- CompactFlash™ Card FC-8M
- Canon Digital Camera Solution CD-ROM
- USB Interface Cable IFC-300 PCU
- Camera User Guide
- System Map (this sheet)
- Software Starter Guide
- Canon Customer Support Leaflet
- Warranty Card

Optional Accessories

The following camera accessories are sold separately. **Some accessories are not sold in some regions.**

Power Supplies

- **AC Adapter Kit ACK800**
This kit lets you power the camera from any standard household power outlet. Recommended to power a camera for an extended period of time or when connecting to a computer.
- **Battery and Charger Kit CBK100**
This dedicated battery charger kit includes both a charger unit and four rechargeable AA-size NiMH (nickel metal hydride) batteries. Convenient when taking or replaying large numbers of images.
- **NiMH Battery NB4-100**
A set of four rechargeable AA-size NiMH batteries. (Two batteries are used for this camera.)

Computer Connection Accessories

- **USB Interface Cable IFC-300PCU**
Use this cable to connect the camera to the computer.
On Windows systems, please note that USB connection is supported only for systems running preinstalled Windows: 98 (including Second Edition), Windows Millennium Edition (Windows Me), Windows 2000 or Windows XP.
On Macintosh Computer systems, please note that USB connection is supported only for computers shipped with a USB connector as standard equipment.
- **PCMCIA Adapter (PC Card Adapter)**
Allows you to load a CF card into the computer's PC card slot.

Other Accessories

- **CF Cards**
CompactFlash™ (CF) cards are used to store images recorded by the camera. Canon CF cards are available in 8 MB, 16 MB, 32 MB, 64 MB and 128 MB capacities.
- **Waterproof Case WP-DC400**
You can use this case to take underwater shots at depth of up to 30 meters (100 feet). And of course it's also ideal for taking worry-free pictures in the rain, at the beach, or at the ski slopes.
- **Soft Case SC-PS900**
Protects the camera from dust and scratches.

Printers

Canon offers the following separately sold printers for use with the camera. You can produce prints quickly and easily with these super-compact, light-weight printers with the direct print function by connecting them to the camera with a single cable and operating the camera's controls. **Some accessories are not sold in some regions.**

- **Card Photo Printer CP-100**
Prints high-quality L size, Postcard Size and Card Size images. Canon's separately sold rechargeable batteries for the CP-100 make the printer portable, even allowing you to print your images outdoors.
- **Color Ink/Paper Set KP-36IP**
- **Color Ink/Paper Set KL-36IP**
- **Color Ink/Paper Set KC-36IP**
- **Color Ink/Label Set KC-18IL**
- **Color Ink/Full-Sized Label Set KC-18IF**
Color ink and paper sets for the CP-100.
- **Paper Cassette PCL-CP100**
Paper cassette for the CP-100 printer.
- **Battery and Charge Adapter Kit BCA-CP100**
These rechargeable lithium-ion batteries and charger for the CP-100 let you print images on the move.
- **Car Battery Adapter CBA-CP100**
(Can also be used with the CP-10 Card Photo Printer)
Allows you to power the CP-100 from your car cigarette lighter.
- **Card Photo Printer CP-10**
Prints high-quality credit card-size images.
- **Color Ink/Paper Set HC-36IP**
- **Color Ink/Paper Set HC-18IP**
- **Color Ink/Label Set HC-18IL**
- **Color Ink/Full-Sized Label Set HC-18IF**
Color ink and paper set for the CP-10 printer.
- **Computer Connection Kit CCK-CP100**
Connects your computer and the CP-10, allowing you to print images directly from your computer.